

CHELSEA CLOCK

PRODUCT MANUAL QUARTZ DESK AND MANTEL CLOCKS

Congratulations

A Chelsea clock is an exquisite time machine. Each is a work of art handcrafted by elite master clockmakers. For more than a century, Chelsea craftsmen have created instruments whose beauty and workmanship enhance their extraordinary functionality and durability.

Chelsea clocks sail the seas with the United States military, grace the ocean's most impressive yachts, and bear witness to meetings of heads of state, presidents, princes, and kings of rock and roll. Chelsea clocks are treasured by collectors, cherished from one generation to the next, and given as gifts to some of the luckiest people in the world.

Whether you purchased a handsome Chelsea clock or received one as a gift, you can be sure that Chelsea's master clockmakers have taken exceptional care to produce one of the world's finest instruments.

Installing The Battery

The clock requires an "AA" alkaline battery. Some clocks require an "N" battery. A fully-charged battery should power the clock for about a year. Please note that old batteries left in the clock may leak and cause damage not covered by the warranty.

NAUTICAL CLOCKS

Unscrew the brass bezel (your model may come with a hinged bezel) that covers the clock face. Grasp the rim of the dial face and gently pull forward to remove it from its case. The clock's quartz movement is affixed to the back of the dial's face. Insert the battery, observing the correct polarity as indicated with plus (+) and minus (-) symbols. To replace the dial, align the notch on the top of the dial with the notch on the clock case. Carefully screw the bezel back onto the clock case.

OTHER MODELS

If the clock has a hinged back, pull gently on the knob and the door will open, revealing the movement. On the battery, observe the correct polarity as indicated with plus (+) and minus (-) symbols. Insert the negative end first, then gently push in the positive end. The clock will start immediately.

Setting the Clock

SETTING THE TIME

To set the clock, turn the small knob on the back of the clock until the hour and minute hands indicate the desired time. To adjust the second hand you must first stop the clock by removing the battery. When the sweep second hand aligns to the 12:00 position, remove the battery. Set the hands a few minutes ahead of the actual time by using the setting knob on the back of the movement. When the actual time coincides with the hands on the clock, reinsert the battery.

SETTING THE MOONPHASE

If the clock also shows the moon phase, first set the time, as above. Check a local newspaper or online source for the current phase of the moon. Use your index finger to turn the white wheel on top of the clock movement until the moon on the clock's face approximates the current phase. For instance, for a waxing half moon, move the dial so the moon is rising with half of the moon showing. Do *not* attempt to adjust the moon phase between the hours of 10:00 and 1:00.

Care and Service

CARING FOR THE CASE

Chelsea Clock cases are constructed of exceptionally high quality brass, highly polished to a fine finish, and then carefully lacquered for long-lasting protection. The chemicals in fingerprints and even ordinary dust may eventually mar this finish. Therefore, we suggest cleaning the case weekly with a clean soft cloth.

Do *not* use polish, cleaner, or other liquids that could tarnish or pit the finish. Treated with this care, the lacquer coating will not be broken and the clock case should retain its bright appearance for many years.

SERVICING THE CLOCK

When the clock requires cleaning or service, we encourage you return it to our factory repair center where an experienced master clockmaker will insure careful, efficient, and guaranteed work. Please take extra care to double-box the clock to avoid damage in transit. You can find further packing and shipping advice online at www.chelseaclock.com.

LIMITED WARRANTY

Your Chelsea clock is warranted against defects in material and workmanship for two (2) years from the date of original purchase. In the event of any such defect, double box the instrument and return it via UPS, along with an explanation of the defect to the address shown below and we will repair or replace it at our own option and expense. Any defects or damage caused by misuse, accident, tampering or negligence of the user is not covered by this warranty. Be certain to carefully and securely double box the instrument for shipment. We will not be responsible for damage in shipment. Please include a check or money order in the amount of \$10.00, which includes the cost of, handling, insurance, and shipping for the return of the clock.

All implied warranties covering merchantability, fitness for particular purpose, or otherwise are limited in duration to two (2) years from the date of original purchase. The repair or replacement of any defect is the exclusive remedy under this warranty. In addition, the warrantor shall not, under any circumstances, be liable or responsible hereunder for consequential, incidental, indirect, or special damages. Please note that some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the foregoing limitation or exclusion may not apply to you. This warranty gives you specific legal rights; you may also have other rights that vary from state to state.

